

lenovo

www.lenovo.com

B3 Series

All-in-One Desktop PC

ideacentre

Before using the accompanied peripherals, carefully read the detailed information in the Safety and Warranty Guide. Since different models have different peripherals, you might not find all of the described items depending on the actual model you purchased.

Note: The remote control cannot turn the computer on and only can be used for Hardware TV.

Infra-red (IR) Remote Control Instructions

| Button | Description |
|--------|--------------------------------|
| | Source (Hardware TV only) |
| | TV ON/OFF (Hardware TV only) |
| | Rewind/Index |
| | Fast forward/Size |
| | Play/Pause |
| | Record |
| | Picture in picture |
| | Information (Hardware TV only) |

| Button | Description |
|--------|--|
| MODE | Picture mode (Hardware TV only) |
| FREEZE | Freeze (Hardware TV only) |
| MENU | Menu (Hardware TV only) |
| EXIT | Exit (Hardware TV only) |
| | Open Software TV |
| | Up, Down |
| | Left, Right |
| | OK |
| | Vol Up |
| | Vol Down |
| | Ch/Pg Up |
| | Ch/Pg Down |
| | Mute |
| | Number buttons |
| | Subtitle |
| | Picture size (Hardware TV only) |
| | Sleep timer (Hardware TV only) |
| | Channel switch (Hardware TV only)/Hold |
| | Digital signal channel break (Hardware TV only)/Reveal |
| | Teletext ON/OFF |
| | Red, Green, Yellow, Blue Teletext keys |

(The Hold and Reveal functions are usable with TV Tuner cards installed and in countries that support Teletext functions only.)


(These 5 buttons are usable with TV Tuner cards installed and in countries that support Teletext functions only.)

Turn on Hardware TV

Turn on computer


Turn on Hardware TV

Press the power button on the side of the computer to turn the TV on.

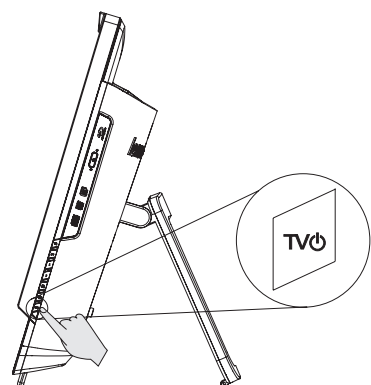

Turn on computer

Press the power button on the bottom left of the screen to turn on the computer.

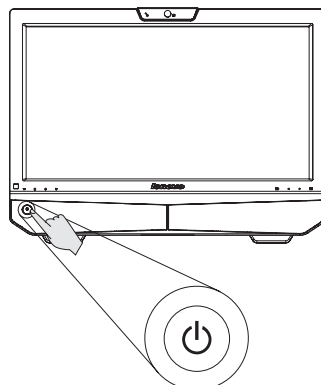



Version: 2.0



31048801



Computer instruction

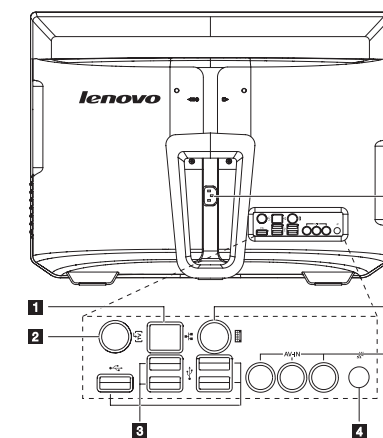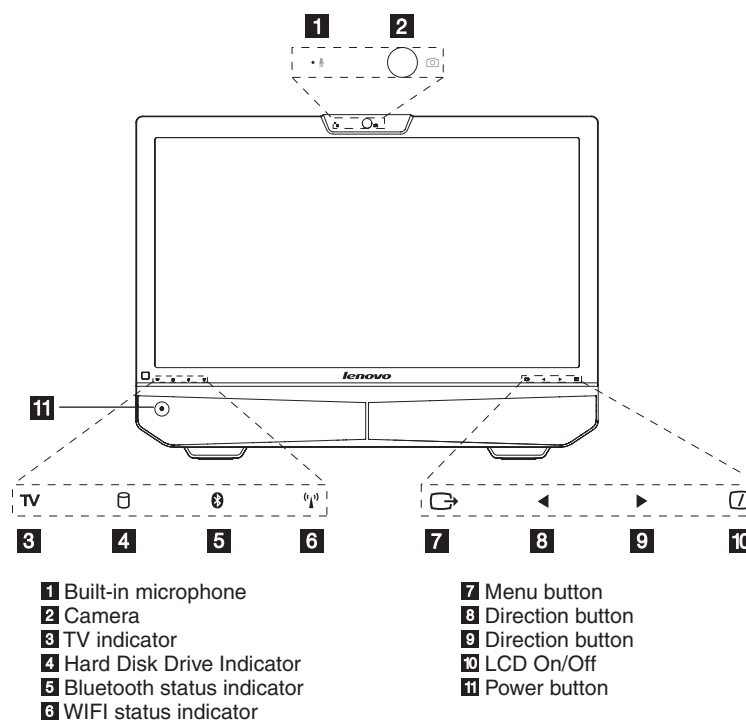

- 1 Channel Up
- 2 Channel Down
- 3 Volume Up
- 4 Volume Down
- 5 TV mode menu button
- 6 Signal source choice button
- 7 TV power On/Off
- 8 Optical drive
- 9 Card reader
- 10 USB port
- 11 Headphone port
- 12 Microphone port
- 13 USB port

